


PYRO 1394 PCI Card Hardware Installation




Step 1

Power down your computer and disconnect the power cord. Be sure to remove the power cord completely from your computer as shown in the picture to the left.

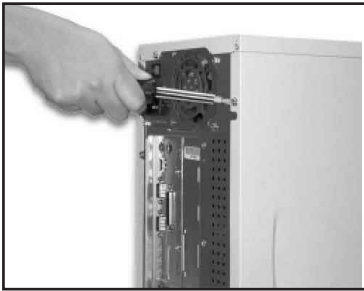


Step 2

Remove the screws that hold the panel/shell of your computer (located on the back of the computer). Be sure to put the screws you removed in a safe place, as you will need them again when replacing the shell on your computer.

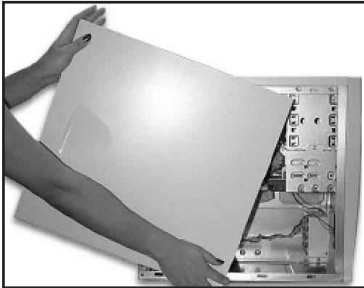

Step 3

Carefully remove the panel/shell from your computer.

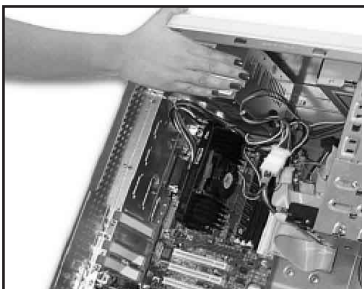


Step 4

With the power cable disconnected from your computer, touch the metal part of the case to ground yourself. This will discharge any static electricity from your body which can damage your




Step 5

Locate an available PCI expansion slot (usually white/beige in color). This will be in the area of your computer where other cards that look similar to the PYRO PCI card are installed.

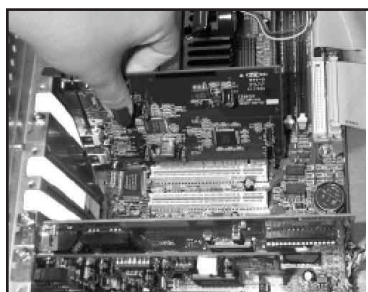


Step 6

Visually confirm that the PYRO 1394 PCI Card will fit into the available slot you have chosen.

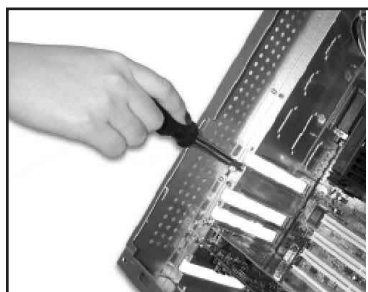

Step 7

If necessary, remove the knockout on the back of your computer which corresponds to the PCI slot you have confirmed as your selection. If there is a screw, place it in a safe place as you will be using it to attach the PYRO 1394 PCI Card.

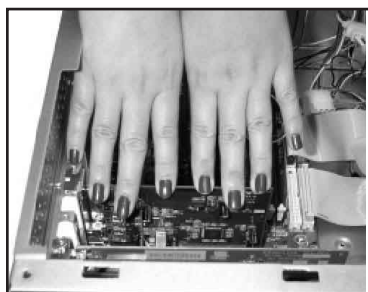

Step 8

Push the PYRO 1394 PCI Card firmly into the PCI slot. Apply pressure as needed (but do not force the card) until the edge connector is completely in the slot.




Step 9 (optional)

Connect the molex power supply to the PYRO card power connector.




Step 10

Mount the PYRO 1394 PCI Card in place with a screw. Make sure the screw is firmly tightened so the PYRO 1394 PCI Card does not slide out of its seated position.

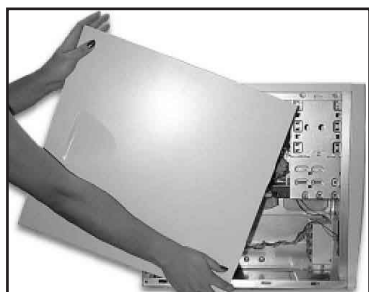

Step 11

Replace the computer's panel/shell and screw it back in place with the screws you removed in step 2.

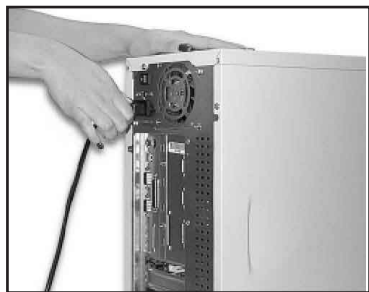

Step 12

Now that your PYRO 1394 PCI Card is installed and the shell is in place, you can safely connect the power cable. Now turn on your computer.

When you turn on your computer Windows will automatically install the necessary drivers.